

Part No.	Description	Part No.	Description	Part No.	Description
76 (819)	Knee or Foot Lifter Lifting Lever Connecting Rod Joint Hinge Screw	2974	Shuttle Bobbin Case Latch Lever Fulcrum Pin	50083(830)	Feed Connecting Link Hinge Stud Set Screw
144(803)	Arm Shaft Screw	2975	Shuttle Bobbin Case Latch Spring	50327(803)	Tension Screw Stud
157(813)	Feed Lifting Rock Shaft Crank Clamping Screw	2996	Shuttle Bobbin		NOTE: Part No. 50327 cannot be supplied individually. Orders must specify No. 44141.
175(804)	Feed Rock Shaft Crank Clamping Screw	3094	Oscillating Shaft Crank Pin	51292(818)	Arm Side Cover Thumb Screw
178(805)	Lifting Presser Bar Guide Bracket Support Screw	4707	Thread Take-up Crank Wedge	52065 (803)	Face Plate Screw (upper)
193(809)	Knee or Foot Lifter Bell Crank Bracket Screw	4802	Shuttle Race Slide Spring	52073	Face Plate Screw (lower)
195(809)	Lifting Presser Bar Bell Crank Connecting Link Cap Screw	4804	Oscillating Rock Shaft Oil Pad	52165	Feed Connecting Link Hinge Stud
199(809)	Lifting Presser Bar Guide Bracket Cap Screw	4805	Needle Bar Thread Guide	52184	Feed Connecting Link Hinge Stud
199(809)	Vibrating Presser Bar Cap Screw	4806	Lifting Presser Bar Lifter	52239	Arm Spool Pin and Thread Eyelet
207(803)	Needle Bar Connecting Stud Clamping Screw	4807	Knee or Foot Lifter Bell Crank	52454	Feed Bar Screw Centre 317(803) with 1519(803)
208(830)	Feed Bar Connecting Stud Clamping Screw	4808	Knee or Foot Lifter Bell Crank	56813	Feed Lifting Rock Shaft Screw Centre 307(803) with 1513(809)
219(809)	Vibrating Presser Foot Screw	4809	Knee or Foot Lifter Bell Crank Hinge Pin	56814	Shuttle Race Body 24413 with 24418 and two 1053(804)
219(809)	Vibrating Presser Bar Cap Screw	4810	Thread Take-up Spring Regulator	90378	Shuttle Bobbin Case with 591(806), 592(805), 2975, 15141 and 15278
226(804)	Oscillating Shaft Crank Pin	4811	Arm Spool Pin and Thread Eyelet	90378	Shuttle Driver with two 109320(803)
231(805)	Arm Shaft Flanged Bushing (back) Oil Drip Screw	4812	Lifting Presser Bar Spring (light)	96627	Arm Oil Tube with 52045
307(803)	Feed Lifting Rock Shaft Screw Centre	4813	Lifting Presser Bar Spring Washer	10194	Crank Connecting Rod Cap Oil Pad
307(803)	Feed Rock Shaft Screw Centre	4814	Tension Thread Guard	10195	Crank Connecting Rod with 107194 and two 896(830)
317(803)	Feed Bar Screw Centre	4815	Lifting Presser Bar Lifting and Releasing Lever Bracket	107577	Face Plate (standard for all Sales Divisions except N.A.I.M.O.)
335(809)	Vibrating Presser Bar Spring Screw	4816	Tension Releasing Lever Spring	107578	Face Plate complete, Nos. 107577, 139815 and 139768
335(813)	Thread Take-up Lever Guard Screw	4817	Feed Bar	107579	Lifting Presser Bar Ball Crank Driving Arm (standard for all Sales Divisions except N.A.I.M.O.)
375(803)	Feed Connecting Link Hinge Screw	4818	Feed Rock Shaft	107580	Lifting Presser Bar Ball Crank Driving Arm (standard for all Sales Divisions except N.A.I.M.O.)
375(803)	Feed Lifting Rock Shaft Crank Connecting Rod Hinge Connection Hinge Screw	4819	Oscillating Rock Shaft Hinge Pin	109520(803)	Lifting Presser Bar Ball Crank Driving Arm (standard for all Sales Divisions except N.A.I.M.O.)
375(803)	Feed Lifting Rock Shaft Crank Connecting Rod Hinge Connection Hinge Screw	4820	Lifting Presser Bar (hollow)	12152	Feed and Feed Lifting Eccentric Sleeve
391(813)	Shuttle Bobbin Case Position Plate Screw	4821	Shuttle Body	132590	Arm Oil Tube Packing (braided cotton)
435(830)	Arm Shaft Bushing (intermediate) Set Screw	4822	Thread Take-up Crank	139615	Face Plate Thread Guard (upper), complete (for agents only)
435(830)	Machine Pulley Set Screw	4823	Shuttle Release Lever Hinge Pin	139702	Arm Oil Tube
446(830)	Arm Shaft Bushing (front) Set Screw	4824	Oscillating Rock Shaft Crank Connecting Rod Joint	139703	Arm Oil Tube 139702 with 32184
446(830)	Feed and Feed Lifting Eccentric Set Screw	4825	Oscillating Rock Shaft Crank Connecting Rod Joint	139704	Arm Oil Tube
448(830)	Arm Shaft Flanged Bushing (back) Set Screw	4826	Shuttle Race Slide	139709	*Arm Shaft Bushing (front)
448(830)	Arm Shaft Flanged Bushing (back) Set Screw	4827	Arm Shaft	139710	*Arm Shaft Bushing (intermediate)
448(830)	Oscillating Rock Shaft Hinge Pin Set Screw	4828	Shuttle Bobbin Case Latch	139711	*Arm Shaft Flanged Bushing (back)
448(830)	Thread Take-up Spring Regulator Set Screw	4829	Shuttle Bobbin Case Hinge, Nos. 2973, 2976 and 15140	139716	Arm Shaft Flanged Bushing (back)
448(830)	Thread Take-up Spring Regulator Set Screw	4830	Shuttle, 1-11/16" diam., complete, Nos. 2996, 12393 and 62740	139719	Arm Shaft Flanged Bushing (back)
453(830)	Lifting Presser Bar Guide Bracket Set Screw	4831	Lifting Presser Bar Ball Crank	139721	Arm Shaft Flanged Bushing (back)
457(330)	Oscillating Shaft Crank Pin Set Screw	4832	Lifting Presser Bar Ball Crank Connecting Link	139722	Arm Shaft Flanged Bushing (back)
591(806)	Shuttle Bobbin Case Latch Stop Screw	4833	Lifting Presser Bar Ball Crank Driving Arm (standard for N.A.I.M.O.)	139723	Arm Shaft Flanged Bushing (back)
624(830)	Thread Retainer Set Screw	4834	Lifting Presser Bar Ball Crank Driving Arm Shaft	139724	Arm Shaft Flanged Bushing (back)
591(806)	Shuttle Bobbin Case Latch Stop Screw	4835	Lifting Presser Bar Ball Crank Driving Arm Shaft Bracket	139725	Arm Shaft Flanged Bushing (back)
681(809)	Pressure Regulating Thumb Screw	4836	Lifting Presser Bar Ball Crank Driving Arm Eccentric	139726	Arm Shaft Flanged Bushing (back)
681(809)	Lifting Presser Bar Lifter Screw	4837	Needle Bar Crank and Lifting Eccentric with 446(830) and 743(830) Crank and Lifting Eccentric with 446(830) and 743(830) Crank	139727	Arm Shaft Flanged Bushing (back)
681(809)	Thread Take-up Crank Wedge Screw	4838	Vibrating Presser Bar Cap	139728	Arm Shaft Flanged Bushing (back)
691(850)	Thread Plate Screw	4839	Vibrating Presser Bar Tension (twobide)	139729	Arm Shaft Flanged Bushing (back)
743(830)	Needle Bar Crank and Lifting Eccentric Position Screw	4840	Vibrating Presser Bar Spring	139730	Arm Shaft Flanged Bushing (back)
756(804)	Thread Take-up Lever Cap Screw	4841	Vibrating Presser Bar Spring	139731	Arm Shaft Flanged Bushing (back)
775(805)	Needle Bar Connecting Link Adjusting Screw	4842	Vibrating Presser Bar Spring	139732	Arm Shaft Flanged Bushing (back)
784(805)	Needle Bar Connecting Link Adjusting Screw	4843	Vibrating Presser Bar Spring	139733	Arm Shaft Flanged Bushing (back)
806(830)	Crank Connecting Rod Cap Screw	4844	Vibrating Presser Bar Spring	139734	Arm Shaft Flanged Bushing (back)
907(804)	Shuttle Race Back Spring Screw	4845	Vibrating Presser Bar Spring	139735	Arm Shaft Flanged Bushing (back)
908(803)	Crank Connecting Rod Hinge Screw	4846	Vibrating Presser Bar Spring	139736	Arm Shaft Flanged Bushing (back)
951(804)	Lifting Presser Bar Bell Crank Driving Arm Shaft Bracket Screw	4847	Vibrating Presser Bar Spring	139737	Arm Shaft Flanged Bushing (back)
966(805)	Feed Lifting Rock Shaft Crank Connecting Rod Cap	4848	Vibrating Presser Bar Spring	139738	Arm Shaft Flanged Bushing (back)
988(803)	Oscillating Shaft Crank Slide Block Screw Stud	4849	Vibrating Presser Bar Spring	139739	Arm Shaft Flanged Bushing (back)
1053(804)	Shuttle Bar Bushing (lower) Set Screw	4850	Vibrating Presser Bar Spring	139740	Arm Shaft Flanged Bushing (back)
1133(830)	Needle Bar Bushing (lower) Set Screw	4851	Vibrating Presser Bar Spring	139741	Arm Shaft Flanged Bushing (back)
1133(830)	Needle Bar Bushing (upper) Set Screw	4852	Vibrating Presser Bar Spring	139742	Arm Shaft Flanged Bushing (back)
1208(819)	Shuttle Race Slide Spring	4853	Vibrating Presser Bar Spring	139743	Arm Shaft Flanged Bushing (back)
1513(809)	Feed Lifting Rock Shaft Screw Centre Nut	4854	Vibrating Presser Bar Spring	139744	Arm Shaft Flanged Bushing (back)
1513(809)	Feed Rock Shaft Screw Centre Nut	4855	Vibrating Presser Bar Spring	139745	Arm Shaft Flanged Bushing (back)
1518(805)	Feed Connecting Link Hinge Screw Nut	4856	Vibrating Presser Bar Spring	139746	Arm Shaft Flanged Bushing (back)
1518(809)	Feed Forked Connection Hinge Screw Nut	4857	Vibrating Presser Bar Spring	139747	Arm Shaft Flanged Bushing (back)
1518(809)	Feed Lifting Rock Shaft Crank Connecting Rod Hinge Screw Nut	4858	Vibrating Presser Bar Spring	139748	Arm Shaft Flanged Bushing (back)
1518(809)	Lifting Presser Bar Bell Crank Driving Arm Eccentric Connection Hinge Screw Nut	4859	Vibrating Presser Bar Spring	139749	Arm Shaft Flanged Bushing (back)
1518(809)	Oscillating Shaft Crank Slide Block Screw Stud Nut	4860	Vibrating Presser Bar Spring	139750	Arm Shaft Flanged Bushing (back)
1518(809)	Feed Bar Screw Centre Nut	4861	Vibrating Presser Bar Spring	139751	Arm Shaft Flanged Bushing (back)
1520(813)	Lifting Presser Bar Lifter Screw Nut	4862	Vibrating Presser Bar Spring	139752	Arm Shaft Flanged Bushing (back)
1521(805)	Knee or Foot Lifter Lifting Lever Connecting Rod Lock Nut	4863	Vibrating Presser Bar Spring	139753	Arm Shaft Flanged Bushing (back)
1560(803)	Tension Regulating Thumb Nut	4864	Vibrating Presser Bar Spring	139754	Arm Shaft Flanged Bushing (back)
1619(805)	Crank Connecting Rod Hinge Screw Nut	4865	Vibrating Presser Bar Spring	139755	Arm Shaft Flanged Bushing (back)
1813	Feed Lifting Rock Shaft Crank Roller and Stud	4866	Vibrating Presser Bar Spring	139756	Arm Shaft Flanged Bushing (back)
1904	Needle Bar Connecting Stud Roller (roller only)	4867	Vibrating Presser Bar Spring	139757	Arm Shaft Flanged Bushing (back)
2049	Lifting Presser Bar Bell Crank Driving Arm Pin	4868	Vibrating Presser Bar Spring	139758	Arm Shaft Flanged Bushing (back)
2102	Tension Disc	4869	Vibrating Presser Bar Spring	139759	Arm Shaft Flanged Bushing (back)
231	Shuttle Race Back	4870	Vibrating Presser Bar Spring	139760	Arm Shaft Flanged Bushing (back)
2332	Shuttle Race Back Position Pin	4871	Vibrating Presser Bar Spring	139761	Arm Shaft Flanged Bushing (back)
2532	Shuttle Race Back Spring	4872	Vibrating Presser Bar Spring	139762	Arm Shaft Flanged Bushing (back)
2533	Shuttle Bobbin Case Latch Lever	4873	Vibrating Presser Bar Spring	139763	Arm Shaft Flanged Bushing (back)
2973	Shuttle Bobbin Case Latch Lever	4874	Vibrating Presser Bar Spring	139764	Arm Shaft Flanged Bushing (back)

* Not supplied to Agencies.